
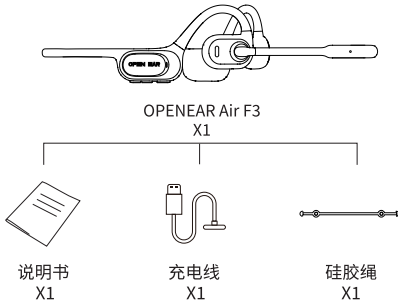 
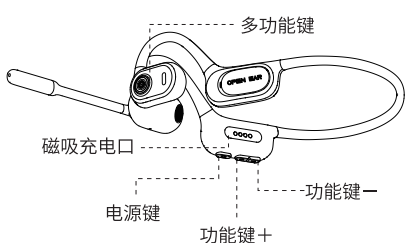 
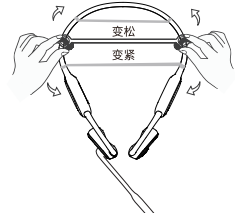 
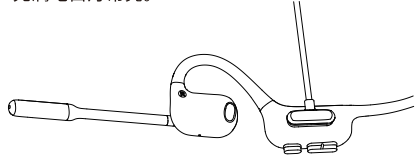 

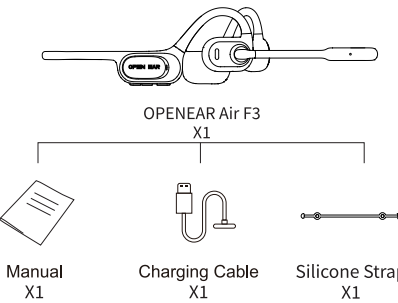 
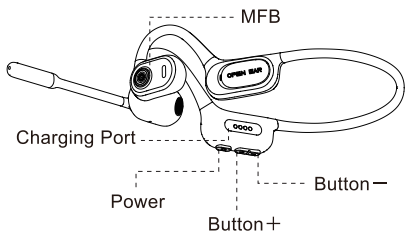 
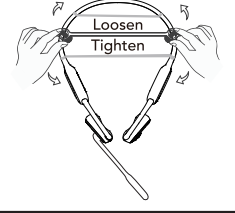 
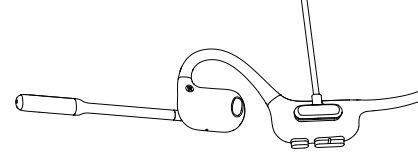 


<h1>开放式无线通讯耳机</h1> <h2>OPENEAR Air F3</h2> <p>使用说明书</p>	<h3>佩戴方式</h3>  <h3>配件清单</h3>  <p>说明书 X1 充电线 X1 硅胶绳 X1</p>	<h3>产品信息</h3> <p>产品型号: OPENEAR Air F3 耳机类型: 开放式无线通讯耳机 BT版本: 5.3 连接范围: ≈10米 音乐模式: ≥19小时 (80%音量) 通讯模式: ≥17小时 (80%音量) 充电时间: ≈50分钟 充电电压: DC 5V 防水等级: IPX5防水</p>	<h3>按键示意图</h3>  <h3>硅胶绳使用</h3> <p>若头围较小, 可使用此硅胶绳配件调节以使耳机佩戴更牢固。将硅胶绳两端分别系于耳机后挂线的两端位置即可。</p> 
<h3>操作步骤</h3> <h4>开/关机</h4> <p>开机: 关机状态下, 长按电源键3秒, LED白绿灯闪烁, 提示音: power on pairing; 关机: 开机状态下, 长按电源键3秒, LED绿灯闪烁3下, 提示音: power off.</p> <h4>BT连接</h4> <p>打开蓝牙菜单, 选择“OPENEAR Air F3”进行连接, 提示音: connected.</p> <h4>开机电量播报</h4> <p>开机后自动播报耳机实时电量。 电量100%-70%, 提示音: battery high. 电量69%-40%, 提示音: battery medium. 电量39%-10%, 提示音: battery low.</p>	<h4>切换音乐模式/通讯模式</h4> <p>耳机内置两种声效模式, 双击开机键进行切换。提示音: music mode (音乐模式) / communication mode (通讯模式)。</p> <h4>通话静音开启/关闭</h4> <p>通话过程中双击多功能键, 提示音: mute on/off.</p> <h4>接听/挂断/拒接来电</h4> <p>接听/挂断来电: 单击多功能键。 拒接来电: 双击多功能键。</p> <h4>播放/暂停音乐</h4> <p>单击多功能键。</p> <h4>上/下一曲</h4> <p>上一曲: 长按+键。下一曲: 长按-键。</p> <h4>音量加/减</h4> <p>音量加: 单击+键。音量减: 单击-键。 当音量达到最大时提示音: maximum volume.</p>	<h4>唤醒语音助手</h4> <p>长按多功能键2秒。</p> <h4>低电量提示</h4> <p>当电池低于20%时, 每隔3分钟绿灯闪烁3下, 低电量提示3分钟循环一次, 提示音“low battery”。</p> <h4>恢复出厂设置</h4> <p>开机状态下, 同时长按“+”“-”键10秒, 恢复出厂设置并重启耳机, 提示音: Restore to factory setting, power on.</p> <h4>充电</h4> <p>请使用DC 5V的适配器进行充电, 充电中绿灯常亮, 充满电白灯常亮。</p> 	<h3>注意事项</h3> <ol style="list-style-type: none"> 长时间听大音量音乐可能会带来不适感, 请尽可能使用中等左右的音量, 避免长时间使用大音量; 无论音量大小, 使用耳机都将影响您对周围环境的感知, 使用耳机时多加注意; 切勿拆除或改装耳机, 否则可能导致耳机故障或烧毁; 切勿抛扔、坐压耳机或将其投入火中; 耳机应远离火、高电压设备; 不合适十岁以下儿童使用, 内包含细小零件; 请勿将其归类为生活垃圾, 而将其送往当地相应的电器设备回收站。 <p>注意: 若用户因违反以上警告内容造成的人身财产损失, 本公司不承担任何责任。</p>

<h1>Open-Ear Communication Headset</h1> <h2>OPENEAR Air F3</h2> <p>User Manual</p>	<h3>How to Wear</h3>  <h3>What's In the Box</h3>  <p>Manual X1 Charging Cable X1 Silicone Strap X1</p>	<h3>Specifications</h3> <p>Model: OPENEAR Air F3 Type: Open-Ear Communication Headset BT Version: 5.3 Connection: ≈10m Music Mode: ≥19h(80%volume) Communication Mode: ≥17h(80%volume) Charging Time: ≈50min Charging Voltage: DC 5V Waterproof: IPX5 rating</p>	<h3>Button Control</h3>  <h3>Silicone Strap Usage</h3> <p>For a smaller head circumference, use this silicone strap accessory to secure headphones better. Tie each end of the strap to the headphone hanging wires behind the ears.</p> 
<h3>Operations</h3> <h4>Power On/Off</h4> <p>Power On: Press and hold the power button for 3 seconds until the LED flashes white and green. Prompt: power on pairing. Power Off: Press and hold the power button for 3 seconds until the LED flashes green three times. Prompt: power off .</p> <h4>BT Connection</h4> <p>Select "OPENEAR Air F3" in BT menu to connect. Prompt: connected.</p> <h4>Battery Level Notification</h4> <p>Automatically announce the real-time battery level of the headphones after power on. Battery 100%-70%: Prompts: battery high. Battery 69%-40%: Prompts: battery medium. Battery 39%-10%: Prompts: battery low.</p>	<h4>Switch Music/Communication Modes</h4> <p>The headphones is built-in 2 sound modes. Double click the power button to switch. Prompt: music mode / communication mode.</p> <h4>Mute On/Off</h4> <p>Double click the MFB during a call to turn on/off mute function. Prompt: mute on / mute off.</p> <h4>Answer/Hang Up/Reject A Call</h4> <p>Answer/Hang Up A Call: Click the MFB once. Reject A Call: Double click the MFB.</p> <h4>Play/Pause Music</h4> <p>Click the MFB once.</p> <h4>Previous/Next Track</h4> <p>Previous Track: Press and hold the + button. Next Track: Press and hold the - button.</p> <h4>Volume Up/Down</h4> <p>Volume Up: Click the button + . Volume Down: Click the button - . When the volume reaches the maximum, Prompt: maximum volume.</p>	<h4>Activate Voice Command</h4> <p>Press and hold the MFB for 2 sec.</p> <h4>Low Battery</h4> <p>The green LED flashes three times every 3 minutes when the headset battery is lower than 20%. Prompt: low battery .</p> <h4>Restore Factory Setting</h4> <p>Press and hold "+ " and "- "button at the same time under power-on status. Prompts: Restore to factory setting, power off.</p> <h4>Charge</h4> <p>Please use DC 5V adapter for charging. Green LED is on charging. White LED is on after fully charged.</p> 	<h3>Attentions</h3> <ol style="list-style-type: none"> Listening to loud music for a long time may cause discomfort, please use medium volume if possible. Do not use high volume for long periods of time. Using headphones will affect your perception of the surrounding environment. Pay more attention when using headphones. Do not remove or modify the headphone, as this may cause damage or burn out. Do not throw, twist on headphones or put them into a fire. Keep it away from fire, hydration and high pressure equipment. Not suitable for children under 10-year-old containing small parts. Do not classify it as household waste. Please send it to the local electrical equipment recycling station. <p>Note: The company does not assume any responsibility for the loss of personal property caused by the violation of the above warnings.</p>