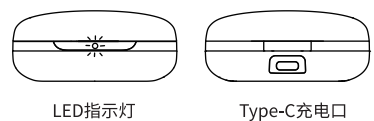 
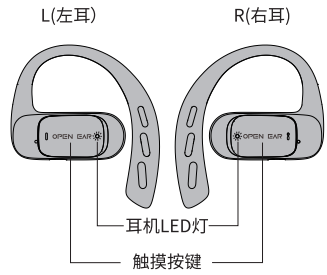 
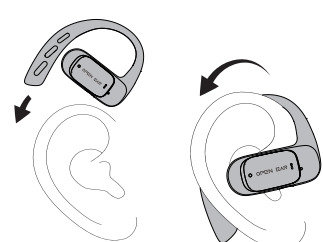 
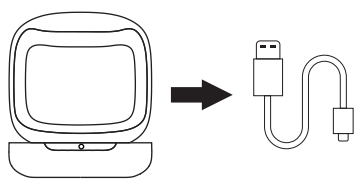 
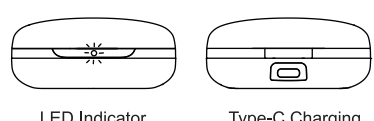 
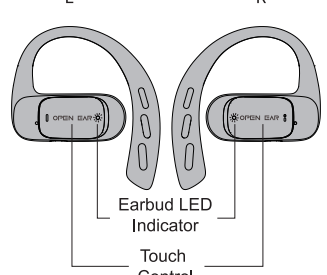 
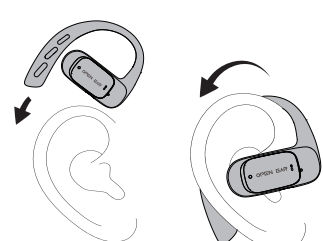 
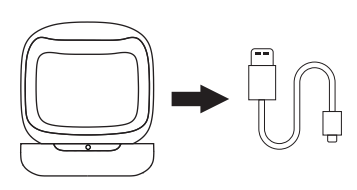 


<h1>开放式真无线耳机</h1> <h2>OPENEAR Arco</h2> <p>使用说明书</p>	<h3>耳机展示</h3>  <p>LED指示灯      Type-C充电口</p>  <p>L(左耳)      R(右耳)</p> <p>耳机LED灯 触摸按键</p>	<h3>产品信息</h3> <p>产品型号: OPENEAR Arco          耳机类型: 开放式真无线耳机          BT版本: V5.4          连接范围: ≈10米          耳机使用时间: ≥5小时 (80%音量)          耳机充电时间: 1小时          充电仓使用时间: 可充耳机7次          充电仓充电时间: 1.5小时          充电电压: DC 5V</p>	<h3>佩戴示意图</h3> <p>将耳挂置于耳后, 向后旋转耳机, 使它轻贴于耳朵上方。</p>  <h3>开机电量播报</h3> <p>开机后自动播报耳机实时电量。          电量100%-70%, 提示音: battery high.          电量69%-40%, 提示音: battery medium.          电量39%-10%, 提示音: battery low.</p>
<h3>操作步骤</h3> <h4>开/关机</h4> <p>开机: 打开充电仓面盖, 耳机自动开机。 提示音: Power on, pairing;</p> <p>关机: 将耳机放入充电仓并合上面盖, 耳机自动关机。 或长按耳机按键5秒, 耳机关机。提示音: Power off.</p> <h4>BT连接</h4> <p>打开蓝牙菜单, 选择“OPENEAR Arco”进行连接, 提示音: connected.</p> <h4>两种音效切换</h4> <p>四击左/右任一耳机按键, 可切换室内/户外模式, 开机默认室内模式。提示音: indoor mode (室内模式) outdoor mode (户外模式)。</p>	<h4>上/下一曲</h4> <p>上一曲: 三击左耳。下一曲: 三击右耳。</p> <h4>音量加/减</h4> <p>音量加: 双击右耳。音量减: 双击左耳。</p> <h4>唤醒语音助手</h4> <p>长按任一耳机3秒, 激活手机语音助手。</p> <h4>播放/暂停音乐</h4> <p>单击任一耳机。</p> <h4>接听/挂断/拒接来电</h4> <p>接听/挂断来电: 单击任一耳机。 拒接来电: 长按1.5秒任一耳机。</p>	<h4>低电量提示</h4> <p>当电池低于20%时, 每隔3分钟白灯闪烁一下, 提示音 “low battery”。</p> <h4>耳机充电</h4> <p>将耳机放入充电仓并合上面盖, 充电时耳机绿灯常亮; 充满电时, 白灯常亮。</p> <h4>充电仓充电</h4> <p>请使用DC 5V适配器和Type-C充电线为充电仓充电。充电仓充电时, 白灯常亮, 充满白灯灭。</p> 	<h3>注意事项</h3> <ol style="list-style-type: none"> <li>长时间听大音量音乐可能会带来不舒适, 请尽可能使用中等左右的音量, 避免长时间使用大音量;</li> <li>无论音量大小, 使用耳机都将影响您对周围环境的感知, 使用耳机时多加注意;</li> <li>切勿拆除或改装耳机, 否则可能导致耳机故障或烧毁;</li> <li>切勿抛扔、坐压耳机或将其投入火中;</li> <li>耳机应远离火、高压电设备;</li> <li>不合适十岁以下儿童使用, 内包含细小零件;</li> <li>请勿将其归类为生活垃圾, 而将其送往当地相应的电器设备回收站。</li> </ol> <p>注意: 若用户因违反以上警告内容造成的人身财产损失, 本公司不承担任何责任。</p>

<h1>Truly Wireless Open Ear Headphones</h1> <h2>OPENEAR Arco</h2> <p>User Manual</p>	<h3>Headphones</h3>  <p>LED Indicator      Type-C Charging</p>  <p>L      R</p> <p>Earbud LED Indicator Touch Control</p>	<h3>Specifications</h3> <p>Model: OPENEAR Arco          Type: Truly Wireless Open Ear Headphones          Version: V5.4          Connection: ≈10m          Earbud Play Time: ≥5H (80% volume)          Earbud Charging: 1H          Case Charge Earbud: 7 Times          Case Charging: 1.5H          Charging Voltage: DC 5V</p>	<h3>How to Wear</h3> <p>Put the earhook behind the ear until it fits your ear.</p>  <h3>Battery Level Notification</h3> <p>Automatically announce the real-time battery level of the headphones after power on.          Battery 100%-70%: Prompts: battery high.          Battery 69%-40%: Prompts: battery medium.          Battery 39%-10%: Prompts: battery low.</p>
<h3>Operations</h3> <h4>Power On/Off</h4> <p>The earbuds are automatically power on when opening case. Prompt: power on pairing;</p> <p>The earbuds turn off when placed into the charging case and closed the lid. Or press and hold the button on the earbuds for 5 sec. Prompt: power off.</p> <h4>BT Connection</h4> <p>Select “OPENEAR Arco” in BT menu to connect. Prompt: connected.</p> <h4>Two Sound Modes</h4> <p>The earbuds is built-in 2 different sound modes .</p> <p>In indoor mode, you will hear more bass effects. In outdoor mode, you will get higher volume.</p> <p>The default mode is indoor mode. Touch 4x of any earbuds to switch from indoor mode to outdoor mode.</p>	<h4>Previous/Next Track</h4> <p>Previous Track: Touch 3x of Left earbud. Next Track: Touch 3x of Right earbud.</p> <h4>Volume Up/Down</h4> <p>Volume Up: Touch 2x of Right earbud. Volume Down: Touch 2x of Left earbud.</p> <h4>Activate Voice Command</h4> <p>Activate Voice Command: Touch 3s of any earbuds.</p> <h4>Play/Pause Music</h4> <p>Touch 1x of any earbuds.</p> <h4>Answer/Hang Up/Reject A Call</h4> <p>Answer/Hang Up A Call: Touch 1x of any earbuds. Reject A Call: Touch 1.5s of any earbuds.</p>	<h4>Low Battery</h4> <p>When battery is lower than 20%, prompt: battery low.</p> <h4>Earbud Charging</h4> <p>Place the earbuds into the charging case and close the lid. The green LED light on the earbud is on when charging. White LED is on after fully charged.</p> <h4>Case Charging</h4> <p>Please use DC 5V adapter for charging. White LED is on charging. The LED is off when fully charged.</p> 	<h3>Attentions</h3> <ol style="list-style-type: none"> <li>Listening to loud music for a long time may cause discomfort, please use medium volume if possible. Do not use high volume for long periods of time.</li> <li>Using headphones will affect your perception of the surrounding environment. Pay more attention when using headphones.</li> <li>Do not remove or modify the headphone, as this may cause damage or burn out.</li> <li>Do not throw, twist on headphones or put them into a fire.</li> <li>Keep it away from fire, hydration and high pressure equipment.</li> <li>Not suitable for children under 10-year-old containing small parts.</li> <li>Do not classify it as household waste. Please send it to the local electrical equipment recycling station.</li> </ol> <p>Note: The company does not assume any responsibility for the loss of personal property caused by the violation of the above warnings.</p>