
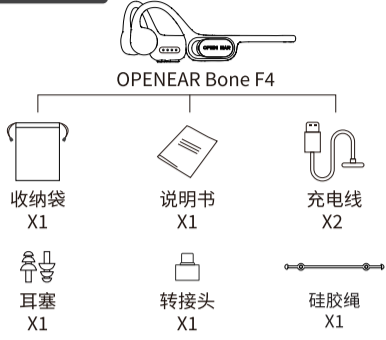 
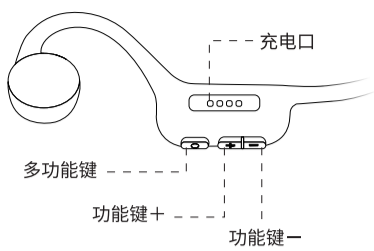 
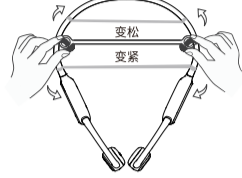 
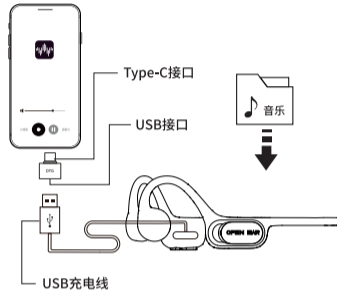 
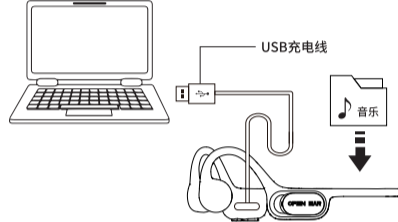 

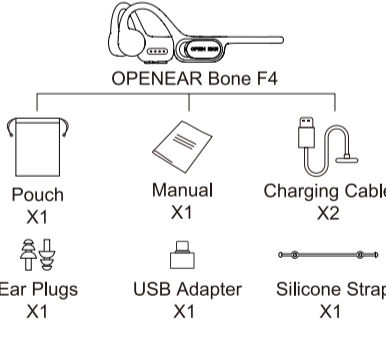 
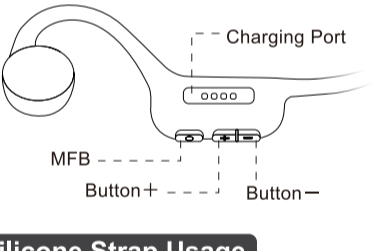 
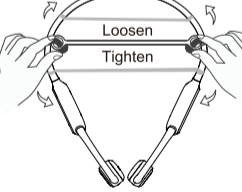 
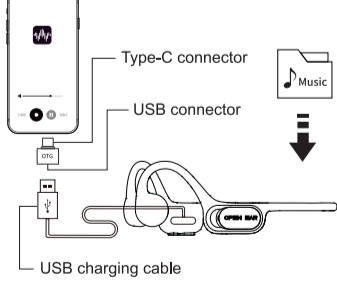 
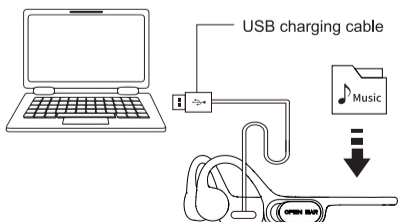 


<h1>防水骨传导运动耳机</h1> <h2>OPENEAR Bone F4</h2> <p>使用说明书</p>	<h3>佩戴方式</h3>  <h3>配件清单</h3> 	<h3>产品信息</h3> <p>产品型号: OPENEAR Bone F4</p> <p>耳机类型: 防水骨传导运动无线耳机</p> <p>BT版本: 5.3</p> <p>连接范围: ≈10米</p> <p>续航时间: ≥7小时 (80%音量)</p> <p>充电时间: ≈50分钟</p> <p>充电电压: DC 5V</p> <p>防水等级: IP68完全防水</p> <p>MP3存储: 32GB (MP3, WMA, FLAC, M4A, WAV)</p>	<h3>按键示意图</h3>  <h3>硅胶绳使用</h3> <p>若头围较小, 可使用此硅胶绳配件调节以使耳机佩戴更牢固。将硅胶绳两端分别系于耳机后挂线的两端位置即可。</p> 	<h3>操作步骤</h3> <h4>开/关机</h4> <p>开机: 长按多功能键3秒, LED白绿灯闪烁, 提示音: power on pairing;</p> <p>关机: 长按多功能键3秒, LED绿灯闪烁3下, 提示音: power off.</p> <h4>开机电量播报</h4> <p>开机后自动播报耳机实时电量。</p> <p>电量100%-70%, 提示音: battery high.</p> <p>电量69%-40%, 提示音: battery medium.</p> <p>电量39%-10%, 提示音: battery low.</p> <h4>BT连接</h4> <p>打开蓝牙菜单, 选择“OPENEAR Bone F4”进行连接, 提示音: connected.</p>
<h3>切换无线/MP3本地模式</h3> <p>开机状态下, 双击多功能键, 切换无线/MP3本地模式。提示音: bluetooth mode/mp3 mode.</p> <h3>本地播放模式切换</h3> <p>MP3模式下, 耳机内设顺序播放、随机播放、单曲循环三种模式。快速三击多功能键进行切换, 提示音: play in order / shuffle play / single cycle.</p> <h3>手机 (Type-C) 接口传输歌曲</h3> <ol style="list-style-type: none"> 将音频文件(MP3、WMA、FLAC、M4A、WAV)下载到您的手机上。 将耳机连接到USB充电线。 将转接头的Type-C端口插入手机接口。 将USB充电线接口连接到转接头的USB接口。 您可以在手机文件夹中看到一个存储盘, 并打开它。 	<p>6. 将下载的音频文件复制粘贴到手机存储盘文件夹中。</p>  <h3>电脑传输歌曲</h3> <ol style="list-style-type: none"> 下载音频文件 (MP3、WMA、FLAC、M4A、WAV) 到您的计算机。 将耳机连接到USB充电线。 将USB线连接到计算机的USB端口。 	<ol style="list-style-type: none"> 您会在计算机上看到一个硬盘驱动器, 并打开它。 将文件拖放到硬盘驱动器文件夹中。 文件传输完成后, 弹出硬盘驱动器。  <h3>接听/挂断/拒接来电</h3> <p>接听/挂断来电: 单击多功能键。</p> <p>拒接来电: 双击多功能键。</p> <h3>播放/暂停音乐</h3> <p>单击多功能键。</p>	<h3>上/下一曲</h3> <p>上一曲: 长按+键。下一曲: 长按-键。</p> <h3>音量加/减</h3> <p>音量加: 单击+键。音量减: 单击-键。最大音量提示音: Maximum volume.</p> <h3>唤醒语音助手</h3> <p>快速三击多功能键。</p> <h3>低电量提示</h3> <p>当电池低于20%时, 每隔3分钟绿灯闪烁3下, 低电量提示3分钟循环一次, 提示音“low battery”。</p> <h3>恢复出厂设置</h3> <p>关机状态下, 长按多功能键10秒。提示音: Restore to factory setting, power off.</p> <h3>充电</h3> <p>请使用DC 5V的适配器进行充电, 充电中绿灯常亮, 充满电白灯常亮。</p>	<h3>注意事项</h3> <ol style="list-style-type: none"> 长时间听大音量音乐可能会带来不适感, 请尽可能使用中等左右的音量, 避免长时间使用大音量; 无论音量大小, 使用耳机都将影响您对周围环境的感知, 使用耳机时多加注意; 切勿拆除或改装耳机, 否则可能导致耳机故障或烧毁; 切勿乱扔、坐压耳机或将其投入火中; 耳机应远离火、高电压设备; 不合适十岁以下儿童使用, 内包含细小零件; 请勿将其归类为生活垃圾, 而将其送往当地相应的电器设备回收站。 <p>注意: 若用户因违反以上警告内容造成的人身财产损失, 本公司不承担任何责任。</p>

<h1>Waterproof Bone Conduction Headphones</h1> <h2>OPENEAR Bone F4</h2> <p>User Manual</p>	<h3>How to Wear</h3>  <h3>What's In the Box</h3> 	<h3>Specifications</h3> <p>Model: OPENEAR Bone F4</p> <p>Type: Bone Conduction Headphones</p> <p>BT Version: 5.3</p> <p>Connection: ≈10m</p> <p>Play Time: ≥7h(80%volume)</p> <p>Charging Time: ≈50min</p> <p>Charging Voltage: DC 5V</p> <p>Waterproof: IP68 Waterproof</p> <p>MP3 Capacity: 32GB (MP3, WMA, FLAC, M4A, WAV)</p>	<h3>Button Control</h3>  <h3>Silicone Strap Usage</h3> <p>For a smaller head circumference, use this silicone strap accessory to secure headphones better. Tie each end of the strap to the headphone hanging wires behind the ears.</p> 	<h3>Operations</h3> <h4>Power On/Off</h4> <p>Power On: Press & hold the MFB for 3 sec. Prompt: power on;</p> <p>Power Off: Press & hold the MFB for 3 sec. Prompt: power off.</p> <h4>Battery Level Notification</h4> <p>Automatically announce the real-time battery level of the headphones after power on.</p> <p>Battery 100%-70%: Prompts: battery high.</p> <p>Battery 69%-40%: Prompts: battery medium.</p> <p>Battery 39%-10%: Prompts: battery low.</p> <h4>BT Connection</h4> <p>Select "OPENEAR Bone F4" in BT menu to connect. Prompt: connected.</p>
<h3>Switch BT/MP3 Mode</h3> <p>Under power-on state, double click the MFB to switch BT/MP3 mode. Prompt: bluetooth mode/mp3 mode.</p> <h3>3 Playback Modes</h3> <p>In MP3 mode, there are 3 built-in playback modes. Default mode: play in order. Quickly triple click the MFB to switch, prompt: play in order / shuffle play / single cycle.</p> <h3>Transfer Files From Phone w/h Type-C</h3> <ol style="list-style-type: none"> Download audio files (MP3, WMA, FLAC, M4A, WAV) to your phone. Connect headphones to the USB charging cable. Plug the type-C connector of USB adapter into phone. Connect the charging cable and USB adapter. You can see a storage disk in the phone folder and open it. 	<p>6. Copy and paste the downloaded audio files into the phone storage disk folder.</p>  <h3>Transfer Files From Computer</h3> <ol style="list-style-type: none"> Download the audio files (MP3, WMA, FLAC, M4A, WAV) into your computer. Attach the headset to the USB charging cable. Connect the USB cable to a computer USB port. 	<ol style="list-style-type: none"> You could see a hard drive on your computer and open it. Drag-and-drop the files into the hard drive folder. Eject the hard drive after files transfer is complete.  <h3>Answer/Hang Up/Reject A Call</h3> <p>Answer/End A Call: click once the MFB.</p> <p>Reject A Call: Double click the MFB.</p> <h3>Play/Pause Music</h3> <p>Click once the MFB.</p>	<h3>Previous/Next Track</h3> <p>Previous Track: Press and hold the button+.</p> <p>Next Track: Press and hold the button-.</p> <h3>Volume Up/Down</h3> <p>Volume Up: Click once the button+.</p> <p>Volume Down: Click once the button-.</p> <p>When the volume reaches the maximum, Prompt: maximum volume.</p> <h3>Activate Voice Command</h3> <p>Quickly triple click the MFB.</p> <h3>Low Battery</h3> <p>The green LED flashes every three times 3 minutes when the headset battery is lower than 20%. Prompt: low battery .</p> <h3>Restore Factory Settings</h3> <p>Under power-off mode, press and hold the MFB for 10sec. Prompt: Restore to factory setting, power off.</p> <h3>Charge</h3> <p>Please use DC 5V adapter for charging. The Green LED is on during charging. The White LED is on after fully charged.</p>	<h3>Attentions</h3> <ol style="list-style-type: none"> Listening to loud music for a long time may cause discomfort, please use medium volume if possible. Do not use high volume for long periods of time. Using headphones will affect your perception of the surrounding environment. Pay more attention when using headphones. Do not remove or modify the headphone, as this may cause damage or burn out. Do not throw, twist on headphones or put them into a fire. Keep it away from fire and high pressure equipment. Not suitable for children under 10-year-old containing small parts. Do not classify it as household waste. Please send it to the local electrical equipment recycling station. <p>Note: The company does not assume any responsibility for the loss of personal property caused by the violation of the above warnings.</p>