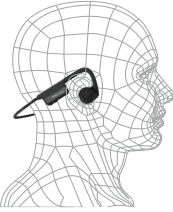 
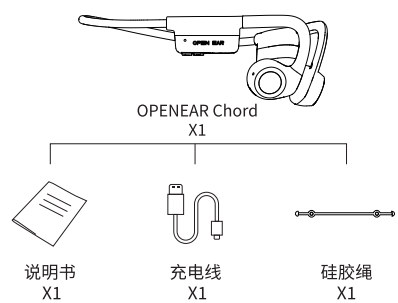 
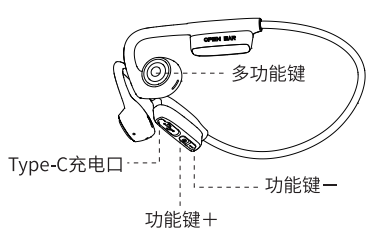 
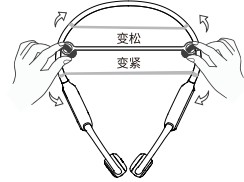 
 

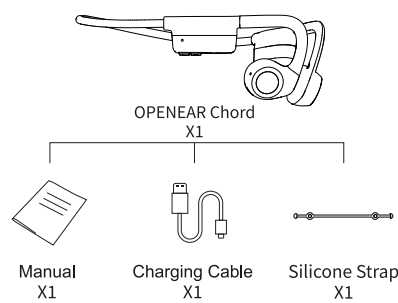 
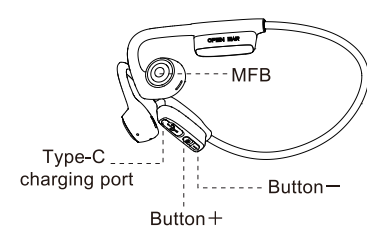 
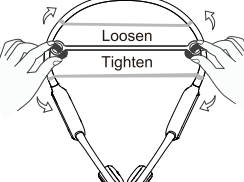 



<h1 style="text-align: center;">双听运动耳机 OPENEAR Chord</h1> <p style="text-align: center;">使用说明书</p>	<h3 style="text-align: center;">佩戴方式</h3>  <h3 style="text-align: center;">配件清单</h3>  <p style="text-align: center;">说明书 X1 充电线 X1 硅胶绳 X1</p>	<h3 style="text-align: center;">产品信息</h3> <p>产品型号: OPENEAR Chord 耳机类型: 双听运动无线耳机 BT版本: 5.3 连接范围: ≈10米 室内模式: ≥17小时 (80%音量) 户外模式: ≥15小时 (80%音量) 充电时间: ≈50分钟 充电电压: DC 5V 防水等级: IPX5防水</p>	<h3 style="text-align: center;">按键示意图</h3>  <h3 style="text-align: center;">硅胶绳使用</h3> <p>若头围较小, 可使用此硅胶绳配件调节以使耳机佩戴更牢固。将硅胶绳两端分别系于耳机后挂线的两端位置即可。</p> 
<h3 style="text-align: center;">操作步骤</h3> <h4>开/关机</h4> <p>开机: 长按+键3秒, LED白绿灯闪烁,提示音: power on pairing; 关机: 长按+键3秒, LED绿灯闪烁3下,提示音: power off.</p> <h4>灯光切换</h4> <p>耳机内置三种灯光模式, 长按“-”键可切换灯光模式: 常亮、快闪、呼吸灯, 再次长按可关闭。</p> <h4>BT连接</h4> <p>打开蓝牙菜单, 选择“OPENEAR Chord”进行连接, 提示音: connected.</p> <h4>开机电量播报</h4> <p>开机后自动播报耳机实时电量。 电量100%-70%, 提示音: battery high. 电量69%-40%, 提示音: battery medium. 电量39%-10%, 提示音: battery low.</p>	<h4>切换室内模式/户外模式</h4> <p>耳机内置两种声效模式, 双击“-”键进行切换。提示音: outdoor mode (户外模式) / indoor mode (室内模式)。</p> <h4>通话静音开启/关闭</h4> <p>通话过程中双击多功能键, 提示音: mute on/off.</p> <h4>接听/挂断/拒接来电</h4> <p>接听/挂断来电: 单击多功能键。 拒接来电: 长按多功能键2秒。</p> <h4>播放/暂停音乐</h4> <p>单击多功能键。</p> <h4>上/下一曲</h4> <p>上一曲: 三击多功能键。下一曲: 双击多功能键。</p> <h4>音量加/减</h4> <p>音量加: 单击+键。音量减: 单击-键。 当音量达到最大时提示音: maximum volume.</p>	<h4>唤醒语音助手</h4> <p>长按多功能键2秒。</p> <h4>低电量提示</h4> <p>当电池低于20%时, 每隔3分钟绿灯闪烁3下, 低电量提示3分钟循环一次, 提示音“low battery”。</p> <h4>恢复出厂设置</h4> <p>关机状态下, 长按+键10秒, 提示音: Restore to factory setting, power off.</p> <h4>充电</h4> <p>请使用DC 5V的适配器进行充电, 充电中绿灯常亮, 充满电白灯常亮。</p> 	<h3 style="text-align: center;">注意事项</h3> <ol style="list-style-type: none"> <li>长时间听大音量音乐可能会带来不适感, 请尽可能使用中等左右的音量, 避免长时间使用大音量;</li> <li>无论音量大小, 使用耳机都将影响您对周围环境的感知, 使用耳机时多加注意;</li> <li>切勿拆除或改装耳机, 否则可能导致耳机故障或烧毁;</li> <li>切勿抛扔、坐压耳机或将其投入火中;</li> <li>耳机应远离火、高电压设备;</li> <li>不合适十岁以下儿童使用, 内包含细小零件;</li> <li>请勿将其归类为生活垃圾, 而将其送往当地相应的电器设备回收站。</li> </ol> <p>注意: 若用户因违反以上警告内容造成的人身财产损失, 本公司不承担任何责任。</p>

<h1 style="text-align: center;">Dual Listening Sports Headphones</h1> <h2 style="text-align: center;">OPENEAR Chord</h2> <p style="text-align: center;">User Manual</p>	<h3 style="text-align: center;">How to Wear</h3>  <h3 style="text-align: center;">What's In the Box</h3>  <p style="text-align: center;">Manual X1 Charging Cable X1 Silicone Strap X1</p>	<h3 style="text-align: center;">Specifications</h3> <p>Model: OPENEAR Chord Type: Open-Ear Wireless Headphones BT Version: 5.3 Connection: ≈10m Indoor Mode: ≥17h(80%volume) Outdoor Mode: ≥15h(80%volume) Charging Time: ≈50min Charging Voltage: DC 5V Waterproof: IPX5 rating</p>	<h3 style="text-align: center;">Button Control</h3>  <h3 style="text-align: center;">Silicone Strap Usage</h3> <p>For a smaller head circumference, use this silicone strap accessory to secure headphones better. Tie each end of the strap to the headphone hanging wires behind the ears.</p> 
<h3 style="text-align: center;">Operations</h3> <h4>Power On/Off</h4> <p>Power On: Press &amp; hold the button + for 3 sec, White and green leds flash. Prompt: power on pairing. Power Off: Press &amp; hold the button + for 3 sec, green led flashes. Prompt: power off .</p> <h4>LED On / Flash / Breath / Off</h4> <p>Press and hold the button - for 5 seconds to turn on, switch flashing and breathing modes and turn off the LED band.</p> <h4>BT Connection</h4> <p>Select "OPENEAR Chord" in BT menu to connect. Prompt: connected.</p> <h4>Battery Level Notification</h4> <p>Automatically announce the real-time battery level of the headphones after power on. Battery 100%-70%: Prompts: battery high. Battery 69%-40%: Prompts: battery medium. Battery 39%-10%: Prompts: battery low.</p>	<h4>Switch Outdoor/Indoor Modes</h4> <p>The headphones is built-in 2 sound modes. Double click the button - to switch. Prompt: outdoor mode / indoor mode.</p> <h4>Mute On/Off</h4> <p>Double click the MFB during a call to turn on/off mute function. Prompt: mute on / mute off.</p> <h4>Answer/Hang Up/Reject A Call</h4> <p>Answer/Hang Up A Call:Click the MFB once. Reject A Call: Press and hold the MFB for 2sec.</p> <h4>Play/Pause Music</h4> <p>Click the MFB once.</p> <h4>Previous/Next Track</h4> <p>Previous Track: Triple click MFB. Next Track: Double click the MFB.</p> <h4>Volume Up/Down</h4> <p>Volume Up: Click the button + . Volume Down: Click the button - . When the volume reaches the maximum, Prompt: maximum volume.</p>	<h4>Activate Voice Command</h4> <p>Press and hold the MFB for 2 sec.</p> <h4>Low Battery</h4> <p>The green LED flashes 3 times every 3 minutes when the battery is lower than 20%, Prompt: low battery .</p> <h4>Restore Factory Setting</h4> <p>Long press the button + for 10 seconds when powered off. Prompt: Restore to factory settings, power off.</p> <h4>Charge</h4> <p>Please use DC 5V adapter for charging. Green LED is on charging. White LED is on after fully charged.</p> 	<h3 style="text-align: center;">Attentions</h3> <ol style="list-style-type: none"> <li>Listening to loud music for a long time may cause discomfort, please use medium volume if possible. Do not use high volume for long periods of time.</li> <li>Using headphones will affect your perception of the surrounding environment. Pay more attention when using headphones.</li> <li>Do not remove or modify the headphone, as this may cause damage or burn out.</li> <li>Do not throw, twist on headphones or put them into a fire.</li> <li>Keep it away from fire, hydration and high pressure equipment.</li> <li>Not suitable for children under 10-year-old containing small parts.</li> <li>Do not classify it as household waste. Please send it to the local electrical equipment recycling station.</li> </ol> <p>Note: The company does not assume any responsibility for the loss of personal property caused by the violation of the above warnings.</p>