骨传导运动耳机 OPENEAR Forte



配件清单



产品信息

产品型号: OPENEAR Forte 耳机类型: 骨传导运动耳机

BT版本: 5.3

连接范围:≈10米

续航时间:≥8小时(80%音量)

充电时间:≈50分钟

充电电压: DC 5V 防水等级: IPX6防水

硅胶绳使用

多功能键

按键示意图

若头围较小,可使用此硅胶绳配件调节以使耳机佩 戴更牢固。将硅胶绳两端分别系于耳机后挂线的两 端位置即可。

功能键-

Type-C充电口 功能键+



操作步骤

开/关机

开机:长按+键3秒,LED白绿灯闪烁,提示音: power on pairing;

使用说明书

关机:长按+键3秒,LED绿灯闪烁3下,提示音:power off.

BT连接

打开蓝牙菜单,选择"OPENEAR Forte"进行连接,提示音:connected.

接听/挂断/拒接来电

接听/挂断来电:单击多功能键。 拒接来电:双击多功能键。

播放/暂停音乐

单击多功能键。

上/下一曲

上一曲: 三击多功能键。下一曲: 双击多功能键。

音量加/减

音量加: 单击+键。音量减: 单击-键。

唤醒语音助手

长按多功能键2秒。

低电量提示

当电池低于20%时,每隔3分钟绿灯闪烁3下,低电量提示3分钟循环一次,提示音"battery low"。

恢复出厂设置

关机状态下,长按+键10秒。

充电

请使用DC 5V的适配器进行充电,充电中绿灯常亮,充满电白灯常亮。



注意事项

- 1.长时间听大音量音乐可能会带来不适感,请尽可能使用中等左右的音量,避免长时间使用大音量; 2.无论音量大小,使用耳机都将影响您对周围环境的感知,使用耳机时多加注意;
- 3.切勿拆除或改装耳机,否则可能导致耳机故障或 烧毁:
- 4.切勿抛扔、坐压耳机或将其投入火中;
- 5.耳机应远离火、高电压设备;
- 6.不合适十岁以下儿童使用,内包含细小零件;
- 7.请勿将其归类为生活垃圾,而将其送往当地相应 的电器设备回收站。

注意:若用户因违反以上警告内容造成的人身财产 损失,本公司不承担任何责任。

Bone Conduction Sports Headphones


OPENEAR Forte

User Manual

How to Wear



What's In the Box

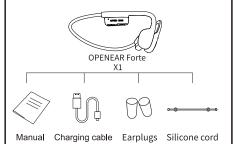

Specifications

Model: OPENEAR Forte

Type: Bone Conduction Headphones

BT Version: 5.3


Connection: ≈10m

Play Time: ≥8h(80%volume)

Charging Time: ≈50min

Charging Voltage: DC 5V
Waterproof: IPX6 rating

Button Control

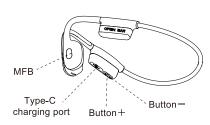

Silicone cord usage

For a smaller head circumference, use this silicone cord accessory to secure headphones better. Tie each end of the cord to the headphone hanging wires behind the ears.



Operations

Power On/Off

Power On: Press & hold the button + for 3 sec, White and green leds flash. Prompt: power on pairing.

Power Off: Press & hold the button \pm for 3 sec, green led flashes. Prompt: power off .

BT Connection

Select "OPENEAR Forte" in BT menu to connect. Prompt: connected.

Answer/Hang Up/Reject A Call

Answer/Hang Up A Call:Click the MFB once. Reject A Call: Double click the MFB.

Play/Pause Music

Click the MFB once.

Previous/Next Track

Previous Track: Tripple click the MFB.

Next Track: Double click the MFB.

Volume Up/Down

Volume Up: Click the button + . Volume Down: Click the button - .

Activate Voice Command

Press and hold the button MFB.

Low Battery

When battery is lower than 20%, prompt: battery

Restore Factory Setting

Under power-off mode, press and hold the utton+ for 10sec.

Charge

Please use DC 5V adapter for charging.Green LED is on charging. White LED is on after fully charged.



Attentions

- Listening to loud music for a long time may cause discomfort, please use medium volume if possible.Do not use high volume for long periods of time.
- 2. Using headphones will affect your perception of the surrounding environment. Pay more
- attention when using headphones.

 3. Do not remove or modify the headphone,as
- this may cause damage or burn out.

 4. Do not throw, twist on headphones or put them
- into a fire.

 5. Keep it away from fire,hydration and high pressure equipment.
- pressure equipment.
 6. Not suitable for children under 10-year-old
- containing small parts.

 7. Do not classify it as household waste. Please sendit to the local electrical equipment recycling

Note: The company does not assume any responsibility for the loss of personal property caused by the violation of the above warnings.