 
 
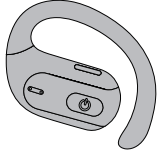 

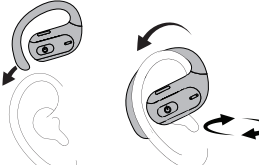 
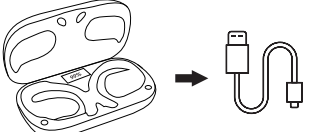 


<h1 style="text-align: center;">不入耳真无线耳机 OPENEAR Lento</h1> <p style="text-align: center;">使用说明书</p>	<h3 style="text-align: center;">耳机展示</h3> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>LED指示灯</p> </div> <div style="text-align: center;">  <p>Type-C充电口</p> </div> </div> <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="text-align: center;"> <p>L(左耳)</p>  </div> <div style="text-align: center;"> <p>R(右耳)</p>  </div> </div>	<h3 style="text-align: center;">产品信息</h3> <p>产品型号: OPENEAR Lento 耳机类型: 不入耳真无线耳机 BT版本: 5.3 连接范围: ≈10米 耳机重量: 20g (单耳10g) 耳机使用时间: ≥4.5小时 (80%音量) 耳机充电时间: 1.5小时 充电仓使用时间: 可充耳机2次 充电仓充电时间: 2小时 充电电压: DC 5V</p> <h3 style="text-align: center;">佩戴示意图</h3> <p>将耳挂置于耳后, 向后旋转耳机, 使它轻贴于耳朵上方, 向内外旋转耳机主体, 直至感到佩戴舒适。</p> 
<h3 style="text-align: center;">操作步骤</h3> <h4>开/关机</h4> <p>开机: 打开充电仓面盖, 耳机自动开机, 提示音: Power on, pairing; 关机: 将耳机放入充电仓并合上面盖, 耳机自动关机。或长按耳机按键 5秒, 耳机关机。提示音: Power off.</p> <h4>BT连接</h4> <p>打开蓝牙菜单, 选择“OPENEAR Lento”进行连接, 提示音: connected.</p> <h4>接听/挂断/拒接来电</h4> <p>接听/挂断来电: 单击任一耳机。 拒接来电: 长按1.5秒任一耳机。</p> <h4>播放/暂停音乐</h4> <p>单击任一耳机。</p> <h4>上/下一曲</h4> <p>上一曲: 三击左耳。下一曲: 三击右耳。</p>	<h3 style="text-align: center;">音量加/减</h3> <p>音量加: 双击右耳。音量减: 双击左耳。</p> <h3 style="text-align: center;">唤醒语音助手</h3> <p>长按任一耳机2秒, 激活手机语音助手。</p> <h3 style="text-align: center;">低电量提示</h3> <p>当耳机电量低于10%时, 每隔60秒白灯闪烁1下, 提示音"battery low"。</p> <h3 style="text-align: center;">充电</h3> <p>将耳机放入充电仓, 充电时绿灯常亮; 耳机充满电时, 绿灯熄灭。</p> <h3 style="text-align: center;">电池仓电量显示</h3> <p>充电仓内数字显示代表充电仓剩余电量; 低电状态下请使用DC 5V适配器和Type-C充电线为充电仓充电。</p> 	<h3 style="text-align: center;">注意事项</h3> <ol style="list-style-type: none"> 长时间听大音量音乐可能会带来不舒适, 请尽可能使用中等左右的音量, 避免长时间使用大音量; 无论音量大小, 使用耳机都将影响您对周围环境的感知, 使用耳机时多加注意; 切勿拆除或改装耳机, 否则可能导致耳机故障或烧毁; 切勿乱扔、坐压耳机或将其投入火中; 耳机应远离火、高电压设备; 不适合十岁以下儿童使用, 内包含细小零件; 请勿将其归类为生活垃圾, 而将其送往当地相应的电器设备回收站。 <p>注意: 若用户因违反以上警告内容造成的人身财产损失, 本公司不承担任何责任。</p>

<h1 style="text-align: center;">Truly Wireless Open Ear Headphones</h1> <p style="text-align: center;">OPENEAR Lento</p> <p style="text-align: center;">User Manual</p>	<h3 style="text-align: center;">Headphones</h3> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p>LED indicator</p> </div> <div style="text-align: center;">  <p>Type-C Charging</p> </div> </div> <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="text-align: center;"> <p>L</p>  </div> <div style="text-align: center;"> <p>R</p>  </div> </div>	<h3 style="text-align: center;">Specifications</h3> <p>Model: OPENEAR Lento Type: Truly Wireless Open Ear Headphones Version: 5.3 Connection: ≈10m Weight: 20g (10g each earbud) Earbud Play Time: ≥4.5H (80% volume) Earbud Charging: 1.5H Case Charge Earbud: 2 Times Case Charging: 2H Charging Voltage: DC 5V</p> <h3 style="text-align: center;">How to Wear</h3> <p>Put the earhook behind the ear and rotate the headset until it fits your ear.</p> 
<h3 style="text-align: center;">Operations</h3> <h4>Power On/Off</h4> <p>Power On: The earbuds turn on automatically when open the lid of charging case. Prompt: power on pairing; Power Off: The earbuds turn off when placed into the charging case and closed the lid. Or press and hold the button on the earbuds for 5 sec. Prompt: power off.</p> <h4>BT Connection</h4> <p>Select "OPENEAR Lento" in BT menu to connect. Prompt: connected.</p> <h4>Answer/Hang Up/Reject A Call</h4> <p>Answer/Hang Up A Call: Click 1x of any earbuds. Reject A Call: Hold on 1.5s of any earbuds.</p> <h4>Play/Pause Music</h4> <p>Click 1X of any earbuds.</p> <h4>Previous/Next Track</h4> <p>Previous Track: Click 3X of Left earbud. Next Track: Click 3X of Right earbud.</p>	<h3 style="text-align: center;">Volume Up/Down</h3> <p>Volume Up: Click 2X of Right earbud. Volume Down: Click 2X of Left earbud.</p> <h3 style="text-align: center;">Activate Voice Command</h3> <p>Hold on for 2s of any earbuds to activate voice assistant.</p> <h3 style="text-align: center;">Low Battery</h3> <p>The white LED flashes when the earbud battery is lower than 10%, prompt: battery low.</p> <h3 style="text-align: center;">Charge</h3> <p>Place the earbuds into the charging case. Green LED is on while charging. The LED is off when fully charged.</p> <h3 style="text-align: center;">Charging Case LED Display</h3> <p>The digital display in the charging case represents the remaining battery of charging case. Please use the DC 5V adapter and Type-C charging cable to charge.</p> 	<h3 style="text-align: center;">Attentions</h3> <ol style="list-style-type: none"> Listening to loud music for a long time may cause discomfort, please use medium volume if possible. Do not use high volume for long periods of time. Using headphones will affect your perception of the surrounding environment. Pay more attention when using headphones. Do not remove or modify the headphone, as this may cause damage or burn out. Do not throw, twist on headphones or put them into a fire. Keep it away from fire, hydration and high pressure equipment. Not suitable for children under 10-year-old containing small parts. Do not classify it as household waste. Please send it to the local electrical equipment recycling station. <p>Note: The company does not assume any responsibility for the loss of personal property caused by the violation of the above warnings.</p>